



Instructions on how to use the Motorola DCT 5100 with the Key Digital CTCA2.

1. Power off the Motorola DCT 5100.
2. Press the menu button on the front panel of the DCT 5100 to bring up a black and white menu. This menu will allow you to change modes to 1080i, 720p, 480p and 480i. In order for the CTCA2 to work you cannot have any modes in 480i.
3. You will need to change the modes to Y,Pr,Pb 1080i and revert 480p in 4:3 mode or Y,Pr,Pb 480p and revert 480p in 4:3 mode. Note flat screen LCD displays do not like 1080i so you will need to select 720p or 480p.
4. Power off the DCT 5100 and check all connections and power on the DCT 5100 on and use as normal.

Dipswitch configuration on the Key Digital CTCA2 should stay in Auto Format mode.

Dip 1 Off.

Dip 2 On.

Dip 3 Off.

Dip 4 Off.

Dip 5 On.

Dip 6 On.

Dip 7 On.

Dip 8 Not used.

Dip 9 Not used.