



UPM Series Cross Reference List

Choose Manufacturer:

Akai:

<u>Display Model</u>	<u>Chief Model</u>
CT-A42AR7A	UPM-2401
PDP-4290	UPM-2401
PDP-4294	UPM-2401

Akira:

<u>Display Model</u>	<u>Chief Model</u>
EPM-420	UPM-2401
SV-42021Q	UPM-2401

Bang & Olufsen:

<u>Display Model</u>	<u>Chief Model</u>
Beovision 4	UPM-2401

BenQ:

<u>Display Model</u>	<u>Chief Model</u>
PDP46W1	UPM-2401
PDP7859	UPM-2401

Chungwa:

<u>Display Model</u>	<u>Chief Model</u>
SN4210P	UPM-2401

Cornea:

<u>Display Model</u>	<u>Chief Model</u>
MP4200	UPM-2401
MP4204	UPM-2401
MP4205	UPM-2401

DreamVision:

<u>Display Model</u>	<u>Chief Model</u>
Revolution Five	UPM-2401
Revolution One	UPM-2401

Dukane:

<u>Display Model</u>	<u>Chief Model</u>
P37	UPM-1401
P42	UPM-1401
P50	UPM-2401

DWIN:

<u>Display Model</u>	<u>Chief Model</u>
HD-50	UPM-2401

Eiki:

<u>Display Model</u>	<u>Chief Model</u>
PLD-42XU	UPM-1401

Eizo:

<i>Display Model</i>	<i>Chief Model</i>
P5070	UPM-2401
P5071	UPM-2401
Electrograph:	
<i>Display Model</i>	<i>Chief Model</i>
DTS4230	UPM-2401
DTS42W	UPM-2401
Faroudja :	
<i>Display Model</i>	<i>Chief Model</i>
FPP-42HD10	UPM-2401
FPP-50HD10	UPM-2401
Fujitsu:	
<i>Display Model</i>	<i>Chief Model</i>
P42HCA10AH	UPM-2401
P42HCA10EH	UPM-2401
P42HCA10WH	UPM-2401
P42HCA11AH	UPM-2401
P42HCA11EH	UPM-2401
P42HCA11WH	UPM-2401
P42HCA12AH	UPM-2401
P42HCA12EH	UPM-2401
P42HCA12WH	UPM-2401
P42HHA10US	UPM-2401
P42HHA30US	UPM-2401
P42VCA	UPM-2401
P42VCA20AH	UPM-2401
P42VCA20EH	UPM-2401
P42VCA20UH	UPM-2401
P42VCA20WH	UPM-2401
P42VCA21AH	UPM-2401
P42VCA21EH	UPM-2401
P42VCA21UH	UPM-2401
P42VCA21WH	UPM-2401
P42VCA22AH	UPM-2401
P42VCA22EH	UPM-2401
P42VCA22UH	UPM-2401
P42VCA22WH	UPM-2401
P42VHA20AS	UPM-2401
P42VHA20ES	UPM-2401
P42VHA20US	UPM-2401
P42VHA20WS	UPM-2401
P42VHA30US	UPM-2401
P50XCA10AH	UPM-2401
P50XCA10EH	UPM-2401
P50XCA10UH	UPM-2401
P50XCA10WH	UPM-2401
P50XCA11AH	UPM-2401
P50XCA11EH	UPM-2401
P50XCA11UH	UPM-2401
P50XCA11WH	UPM-2401
P50XCA12AH	UPM-2401
P50XCA12EH	UPM-2401
P50XCA12UH	UPM-2401
P50XCA12WH	UPM-2401
P50XHA10US	UPM-2401
P50XHA30WS	UPM-2401
P55XHA30WS	UPM-2401
PDS-4208	UPM-2401
PDS-4209	UPM-2401
PDS-4211W-H	UPM-2401
PDS-4212W-H	UPM-2401
PDS-4213-H	UPM-2401
PDS-4214W-H	UPM-2401
PDS-4221	UPM-2401

PDS-4222	UPM-2401
PDS-4229	UPM-2401
PDS-4233	UPM-2401
PDS-4234	UPM-2401
PDS-4241	UPM-2401
PDS-4242	UPM-2401
PDS-5001	UPM-2401
PDS-5002	UPM-2401
PDS-5003	UPM-2401
PDS-5004	UPM-2401

Gateway:

<i>Display Model</i>	<i>Chief Model</i>
42	UPM-2401
46	UPM-2401

HD Vision:

<i>Display Model</i>	<i>Chief Model</i>
HDV-42A	UPM-2401
HDV-46P2	UPM-2401

Helios:

<i>Display Model</i>	<i>Chief Model</i>
HLTV4200B	UPM-2401
HPTV4200A	UPM-2401
HPTV4200B	UPM-2401
HPTV4205A	UPM-2401

Hitachi:

<i>Display Model</i>	<i>Chief Model</i>
32HDT20	UPM-1401
32HDT50	UPM-1401
32HDT55	UPM-1401
32HDX60	UPM-1401
32PD3000	UPM-1401
32PD5200	UPM-1401
37PD5000	UPM-1401
37PD5200	UPM-1401
42HDM70	UPM-1401
42HDT20	UPM-1401
42HDT50	UPM-1401
42HDT55	UPM-1401
42HDX60	UPM-1401
42PD3000	UPM-1401
42PD5000	UPM-1401
42PD5100	UPM-1401
42PD5200	UPM-1401
42PD5300	UPM-1401
42PMA400E	UPM-1401
50HDT50	UPM-2401
50HDT55	UPM-2401
50HDX60	UPM-2401
CMP307XU	UPM-1401
CMP401XU	UPM-1401
CMP402HDE	UPM-1401
CMP402HDU	UPM-1401
CMP4102HDU	UPM-1401
CMP4120HDU	UPM-1401
CMP4121HDU	UPM-1401
CMP4201U	UPM-1401
CMP4202HDU	UPM-1401
CMP5000WXE	UPM-2401
CMP5000WXU	UPM-2401

Hyundai:

<i>Display Model</i>	<i>Chief Model</i>
ImageQuest PD421	UPM-2401

Integra:	
<i>Display Model</i>	<i>Chief Model</i>
PLA-50V1	UPM-2401
JVC:	
<i>Display Model</i>	<i>Chief Model</i>
4210PCE	UPM-2401
4211PZW	UPM-2401
GD-V4200PZW	UPM-2401
GD-V4210PCE	UPM-2401
GD-V4210PZW	UPM-2401
GD-V4211PZW	UPM-2401
GD-V500PCE	UPM-2401
GD-V500PZU	UPM-2401
GD-V501U	UPM-2401
GD-V502PCE	UPM-2401
GD-V502U	UPM-2401
GM-P420PCE	UPM-2401
GM-P420UG	UPM-2401
GM-V42UB	UPM-2401
GM-V42UG	UPM-2401
LG Electronics:	
<i>Display Model</i>	<i>Chief Model</i>
42PZ60	UPM-2401
50PZ60	UPM-2401
MT-42PZ40	UPM-2401
MT-42PZ41	UPM-2401
MT-42PZ44	UPM-2401
MT-42PZ45	UPM-2401
MT-42PZ46	UPM-2401
MT-42PZ47	UPM-2401
MT-50PZ45V	UPM-2401
MT-50PZ46V	UPM-2401
MT-50PZ47V	UPM-2401
MT-50PZ90	UPM-2401
MT-50PZ91	UPM-2401
MT-50PZ92	UPM-2401
MT-50PZ93	UPM-2401
MU-40PA10B	UPM-2401
MU-42PZ11B	UPM-2401
MU-42PZ41V	UPM-2401
MU-42PZ90V	UPM-2401
MU-50PZ41B	UPM-2401
MU-50TV90V	UPM-2401
MZ-42PZ13	UPM-2401
MZ-42PZ17	UPM-2401
MZ-42PZ44	UPM-2401
MZ-50PZ43	UPM-2401
RU-42PZ90	UPM-2401
RU-42PZ91	UPM-2401
RU-42PZ92	UPM-2401
RU-42PZ93	UPM-2401
Marantz:	
<i>Display Model</i>	<i>Chief Model</i>
PD-4220	UPM-2401
PD-4240	UPM-2401
PD-4280	UPM-2401
PD-4290D	UPM-2401
PD-4292D	UPM-2401
PD-4293D	UPM-1401
PD-4298HD	UPM-1401
PD-5010	UPM-2401
PD-5020	UPM-2401
PD-5040	UPM-2401

Maxx:

<i>Display Model</i>	<i>Chief Model</i>
4250	UPM-2401
4250T	UPM-2401
5000	UPM-2401

Mitsubishi:

<i>Display Model</i>	<i>Chief Model</i>
PD-4225	UPM-2401
PD-5010	UPM-2401
PD-5030	UPM-2401

Monivision:

<i>Display Model</i>	<i>Chief Model</i>
PD-3231	UPM-1401
PWV-46	UPM-2401

NEC:

<i>Display Model</i>	<i>Chief Model</i>
50XM2A	UPM-2401
50XMSA	UPM-2401
PD1	UPM-2401
PX-2A	UPM-2401
PX-3A	UPM-2401
PX-42M1A	UPM-2401
PX-42M2A	UPM-2401
PX-42M3A	UPM-2401
PX-42M4A	UPM-2401
PX-42M5A	UPM-2401
PX-42M5A	UPM-2401
PX-42MP1	UPM-2401
PX-42PD1	UPM-2401
PX-42PD2	UPM-2401
PX-42VM1A	UPM-2401
PX-42VM2A	UPM-2401
PX-42VM3A	UPM-2401
PX-42VM4A	UPM-2401
PX-42VP1A	UPM-2401
PX-42VP2A	UPM-2401
PX-42VP3A	UPM-2401
PX-42VP4	UPM-2401
PX-42VP4D	UPM-2401
PX-42ZP4	UPM-2401
PX-4A	UPM-2401
PX-50M5A	UPM-2401
PX-50PD1	UPM-2401
PX-50VP1A	UPM-2401
PX-50VP2A	UPM-2401
PX-50XM1A	UPM-2401
PX-50XM2A	UPM-2401
PX-50XM3A	UPM-2401
PX-5A	UPM-2401
PX-MP2	UPM-2401
PX-VM1A	UPM-2401
VM2A	UPM-2401
VM3A	UPM-2401
VM4A	UPM-2401
VP2A	UPM-2401
VP3A	UPM-2401
VP4	UPM-2401
VP4D	UPM-2401
XM1A	UPM-2401

NetTV:

<i>Display Model</i>	<i>Chief Model</i>
PDP-42V	UPM-2401

Optoma:

<i>Display Model</i>	<i>Chief Model</i>
PD-46	UPM-2401

Panasonic:

<i>Display Model</i>	<i>Chief Model</i>
PH-42PWD3	UPM-2401
PT-37P1	UPM-2401
PT-37PD4P	UPM-2401
PT-42P1	UPM-2401
PT-42PD1-P	UPM-2401
PT-42PD2-P	UPM-2401
PT-42PD3-P	UPM-2401
PT-42PHD4-P	UPM-2401
PT-50PD3-P	UPM-2401
PT-50PHD4-P	UPM-2401
TH-37PW5B	UPM-2401
TH-37PWD4E	UPM-2401
TH-37PWD4UZ	UPM-2401
TH-37PWD5BX	UPM-2401
TH-37PWD5UZ	UPM-2401
TH-37PWD6UY	UPM-2401
TH-37PX20UP	UPM-2401
TH-37PX25UP	UPM-2401
TH-42PHD5BX	UPM-2401
TH-42PHD5UY	UPM-2401
TH-42PHD6UY	UPM-2401
TH-42PW3E	UPM-2401
TH-42PW3U	UPM-2401
TH-42PW4EX	UPM-2401
TH-42PW5B	UPM-2401
TH-42PWD3U	UPM-2401
TH-42PWD4U	UPM-2401
TH-42PWD4UY	UPM-2401
TH-42PWD5BX	UPM-2401
TH-42PWD5UY	UPM-2401
TH-42PWD6UY	UPM-2401
TH-42PX20UP	UPM-2401
TH-42PX25UP	UPM-2401
TH-50PHD3E	UPM-2401
TH-50PHD3U	UPM-2401
TH-50PHD5BX	UPM-2401
TH-50PHD5UY	UPM-2401
TH-50PHD6UY	UPM-2401
TH-50PHW5B	UPM-2401
TH-50PWD5EX	UPM-2401
TH-50PX20UP	UPM-2401
TH-50PX25UP	UPM-2401

Philips:

<i>Display Model</i>	<i>Chief Model</i>
42FD9935	UPM-2401
50FD9934	UPM-2401
50FD9955	UPM-2401
50W997	UPM-2401

Pioneer:

<i>Display Model</i>	<i>Chief Model</i>
PDP-4300	UPM-2401
PDP-4310HD	UPM-2401
PDP-4330HD	UPM-2401
PDP-433CMX	UPM-2401
PDP-433HDE	UPM-2401
PDP-433PU	UPM-2401
PDP-4340HD	UPM-2401
PDP-434DHE	UPM-2401

PDP-5030HD	UPM-2401
PDP-503CMX	UPM-2401
PDP-503HDE	UPM-2401
PDP-503MXE	UPM-2401
PDP-5040HD	UPM-2401
PDP-505HD	UPM-2401
PDP-V501MC	UPM-2401
PDP-V501X	UPM-2401
PDP-V502MX	UPM-2401
PDP-V502MX	UPM-2401
PRO-1000HD	UPM-2401
PRO-1110HD	UPM-2401
PRO-800HD	UPM-2401
PRO-910HD	UPM-2401

Planar:

<i>Display Model</i>	<i>Chief Model</i>
PDP-42B	UPM-2401

Polyvision:

<i>Display Model</i>	<i>Chief Model</i>
9350	UPM-2401

Princeton Graphics:

<i>Display Model</i>	<i>Chief Model</i>
AR4.6PDP	UPM-2401

RCA:

<i>Display Model</i>	<i>Chief Model</i>
PHD50300	UPM-2401
PHD50500	UPM-2401
PR42300	UPM-2401

Runco:

<i>Display Model</i>	<i>Chief Model</i>
CW-42	UPM-2401
CW-43MC	UPM-2401
CW-50MC	UPM-2401
PL-42	UPM-2401
PL-42C	UPM-2401
PL-42CX	UPM-2401
PL-43HDX	UPM-2401
PL-50C	UPM-2401
PL-50CX	UPM-2401
PL-50HDX	UPM-2401

Sampo:

<i>Display Model</i>	<i>Chief Model</i>
PME-42S6	UPM-2401
PME-42X6	UPM-2401

Samsung:

<i>Display Model</i>	<i>Chief Model</i>
HPL5025	UPM-2401
HPN5039	UPM-2401
PDP-50HD	UPM-2401
PDP-50VG	UPM-2401
PL-42P3S	UPM-2401
PPM-42S2	UPM-2401
PPM-42S3	UPM-2401
PPM50H2	UPM-2401
PPM50H3	UPM-2401
PS-42P2S	UPM-2401
SPL-4225K	UPM-2401
SPN-4235	UPM-2401

Sanyo:

<i>Display Model</i>	<i>Chief Model</i>
PDP-32H1A	UPM-1401
PDP-42H1A	UPM-1401
PDP-42H1W	UPM-1401
PDP-42WE1	UPM-2401

Sharp:

<i>Display Model</i>	<i>Chief Model</i>
LC-PD50U	UPM-2401
PZ-43HV2U	UPM-2401
PZ-50HV2U	UPM-2401

Sony:

<i>Display Model</i>	<i>Chief Model</i>
42B1U	UPM-1401
42B2	UPM-1401
5000	UPM-1401
50XBR900	UPM-1401
KDE-50XBR950	UPM-1401
KE-32TS2U	UPM-1401
KE-42MR1	UPM-1401
KE-42TS2U	UPM-1401
KE-42XBR900	UPM-1401
KE-42XS910	UPM-1401
KE-50MR1	UPM-1401
KE-50XBR900	UPM-1401
KE-50XBR950	UPM-1401
KE-50XS910	UPM-1401
KZ-32TS1	UPM-1401
KZ-42TS1	UPM-1401
PDM-4200	UPM-1401
PDM-4210	UPM-1401
PDM-5000	UPM-1401
PDM-5010	UPM-1401
PFM-32C1	UPM-1401
PFM-42B1	UPM-1401
PFM-42B1U	UPM-1401
PFM-42B2	UPM-1401
PFM-42V1	UPM-1401
PFM-50C1	UPM-1401

Tatung:

<i>Display Model</i>	<i>Chief Model</i>
P42BLTL	UPM-2401
P46	UPM-2401
TPD4201S	UPM-2401

Thomson:

<i>Display Model</i>	<i>Chief Model</i>
32PW95	UPM-1401
42WS93	UPM-2401
42WS93E	UPM-2401
42WS94	UPM-2401
42WS95	UPM-2401
50WS94	UPM-2401
50WS95	UPM-2401
94	UPM-2401
95	UPM-2401

Toshiba:

<i>Display Model</i>	<i>Chief Model</i>
42HP82	UPM-2401
42WP27	UPM-2401
50HP81	UPM-2401
50HP82	UPM-2401
50PW16	UPM-2401
50XP27	UPM-2401

PD42W1	UPM-2401
PD42WP16	UPM-2401
Trans-Lux:	
<i>Display Model</i>	<i>Chief Model</i>
Plasma 5000	UPM-2401
V INC.:	
<i>Display Model</i>	<i>Chief Model</i>
VIZIO P4	UPM-2401
Viewsonic:	
<i>Display Model</i>	<i>Chief Model</i>
VPW420	UPM-2401
VPW425	UPM-2401
VPW425	UPM-2401
VPW450HD	UPM-2401
VPW500	UPM-2401
VPW505	UPM-2401
Yamaha:	
<i>Display Model</i>	<i>Chief Model</i>
PDM-1	UPM-2401
Zenith:	
<i>Display Model</i>	<i>Chief Model</i>
P40V22	UPM-2401
P40V24	UPM-2401
P42W22	UPM-2401
P42W24	UPM-2401
P42W34	UPM-2401
P50W26	UPM-2401
P50W28	UPM-2401
P50W38	UPM-2401
SC352	UPM-2401