

[HOME](#)[PRODUCT LIBRARY](#)[RESIDENTIAL](#)[INTERNATIONAL](#)[ORDER](#)[CONTACT US](#)[ABOUT US](#)**QuickSearch**

[Search by Manufacturer](#)
[Search by Chief Product Type](#)
[Cross Reference Lists](#)

P. 800.582.6480 F. 877.894.6918 | **INTERNATIONAL** P. 952.894.6280 F. 952.894.6918

USM Series Cross Reference List

Choose Manufacturer:

[View Excel Format](#)**Akai:**

<i>Display Model</i>	<i>Chief Model</i>
CT-A42AR7A	USM-2401
PDP-4290	USM-2401
PDP-4294	USM-2401
PDP-5090	USM-2401

Akira:

<i>Display Model</i>	<i>Chief Model</i>
EPM-420	USM-2401
SV-4202IQ	USM-2401

Bang & Olufsen:

<i>Display Model</i>	<i>Chief Model</i>
Beovision 4	USM-2401

BenQ:

<i>Display Model</i>	<i>Chief Model</i>
PDP46W1	USM-2401
PDP7859	USM-2401

ByD:sign:

<i>Display Model</i>	<i>Chief Model</i>
4222	USM-2401
4232	USM-2401
5032	USM-2401

Chungwa:

<i>Display Model</i>	<i>Chief Model</i>
SN4210P	USM-2401

Cornea:

<i>Display Model</i>	<i>Chief Model</i>
MP4200	USM-2401
MP4204	USM-2401
MP4205	USM-2401

DreamVision:

<i>Display Model</i>	<i>Chief Model</i>
Revolution Five	USM-2401
Revolution One	USM-2401

Dukane:

<i>Display Model</i>	<i>Chief Model</i>
P37	USM-1401
P42	USM-1401
P50	USM-2401

DWIN:

<i>Display Model</i>	<i>Chief Model</i>

HD-50	USM-2401
Eiki:	
<i>Display Model</i>	<i>Chief Model</i>
PLD-42XU	USM-1401
Eizo:	
<i>Display Model</i>	<i>Chief Model</i>
P5070	USM-2401
P5071	USM-2401
Electrograph:	
<i>Display Model</i>	<i>Chief Model</i>
DTS4230	USM-2401
DTS42W	USM-2401
Faroudja :	
<i>Display Model</i>	<i>Chief Model</i>
FPP-42HD10	USM-2401
FPP-50HD10	USM-2401
Fujitsu:	
<i>Display Model</i>	<i>Chief Model</i>
P42HCA10AH	USM-2401
P42HCA10EH	USM-2401
P42HCA10WH	USM-2401
P42HCA11AH	USM-2401
P42HCA11EH	USM-2401
P42HCA11WH	USM-2401
P42HCA12AH	USM-2401
P42HCA12EH	USM-2401
P42HCA12WH	USM-2401
P42HHA10US	USM-2401
P42HHA30US	USM-2401
P42VCA	USM-2401
P42VCA20AH	USM-2401
P42VCA20EH	USM-2401
P42VCA20UH	USM-2401
P42VCA20WH	USM-2401
P42VCA21AH	USM-2401
P42VCA21EH	USM-2401
P42VCA21UH	USM-2401
P42VCA21WH	USM-2401
P42VCA22AH	USM-2401
P42VCA22EH	USM-2401
P42VCA22UH	USM-2401
P42VCA22WH	USM-2401
P42VHA20AS	USM-2401
P42VHA20ES	USM-2401
P42VHA20US	USM-2401
P42VHA20WS	USM-2401
P42VHA30US	USM-2401
P50XCA10AH	USM-2401
P50XCA10EH	USM-2401
P50XCA10UH	USM-2401
P50XCA10WH	USM-2401
P50XCA11AH	USM-2401
P50XCA11EH	USM-2401
P50XCA11UH	USM-2401
P50XCA11WH	USM-2401
P50XCA12AH	USM-2401
P50XCA12EH	USM-2401
P50XCA12UH	USM-2401
P50XCA12WH	USM-2401
P50XHA10US	USM-2401
P50XHA30WS	USM-2401
P55XHA30WS	USM-2401

PDS-4208	USM-2401
PDS-4209	USM-2401
PDS-4211W-H	USM-2401
PDS-4212W-H	USM-2401
PDS-4213-H	USM-2401
PDS-4214W-H	USM-2401
PDS-4221	USM-2401
PDS-4222	USM-2401
PDS-4229	USM-2401
PDS-4233	USM-2401
PDS-4234	USM-2401
PDS-4241	USM-2401
PDS-4242	USM-2401
PDS-5001	USM-2401
PDS-5002	USM-2401
PDS-5003	USM-2401
PDS-5004	USM-2401

Gateway:

<i>Display Model</i>	<i>Chief Model</i>
42	USM-2401
46	USM-2401

HD Vision:

<i>Display Model</i>	<i>Chief Model</i>
HDV-42A	USM-2401
HDV-46P2	USM-2401

Helios:

<i>Display Model</i>	<i>Chief Model</i>
HLTV4200B	USM-2401
HPTV4200A	USM-2401
HPTV4200B	USM-2401
HPTV4205A	USM-2401

Hitachi:

<i>Display Model</i>	<i>Chief Model</i>
32HDT20	USM-1401
32HDT50	USM-1401
32HDT55	USM-1401
32HDX60	USM-1401
32PD3000	USM-1401
32PD5200	USM-1401
37PD5000	USM-1401
37PD5200	USM-1401
42HDM70	USM-1401
42HDT20	USM-1401
42HDT50	USM-1401
42HDT55	USM-1401
42HDX60	USM-1401
42PD3000	USM-1401
42PD5000	USM-1401
42PD5100	USM-1401
42PD5200	USM-1401
42PD5300	USM-1401
42PMA400E	USM-1401
50HDT50	USM-2401
50HDT55	USM-2401
50HDX60	USM-2401
CMP307XU	USM-1401
CMP401XU	USM-1401
CMP402HDE	USM-1401
CMP402HDU	USM-1401
CMP4102HDU	USM-1401
CMP4120HDU	USM-1401
CMP4121HDU	USM-1401
CMP4201U	USM-1401

CMP4202HDU	USM-1401
CMP5000WXE	USM-2401
CMP5000WXU	USM-2401

Hyundai:

<i>Display Model</i>	<i>Chief Model</i>
ImageQuest PD421	USM-2401

Integra:

<i>Display Model</i>	<i>Chief Model</i>
PLA-50V1	USM-2401

JVC:

<i>Display Model</i>	<i>Chief Model</i>
4210PCE	USM-2401
4211PZW	USM-2401
GD-V4200PZW	USM-2401
GD-V4210PCE	USM-2401
GD-V4210PZW	USM-2401
GD-V4211PZW	USM-2401
GD-V500PCE	USM-2401
GD-V500PZU	USM-2401
GD-V501U	USM-2401
GD-V502PCE	USM-2401
GD-V502U	USM-2401
GM-P420PCE	USM-2401
GM-P420UG	USM-2401
GM-V42UB	USM-2401
GM-V42UG	USM-2401

LG Electronics:

<i>Display Model</i>	<i>Chief Model</i>
42PZ60	USM-2401
50PZ60	USM-2401
MT-42PZ40	USM-2401
MT-42PZ41	USM-2401
MT-42PZ44	USM-2401
MT-42PZ45	USM-2401
MT-42PZ46	USM-2401
MT-42PZ47	USM-2401
MT-50PZ45V	USM-2401
MT-50PZ46V	USM-2401
MT-50PZ47V	USM-2401
MT-50PZ90	USM-2401
MT-50PZ91	USM-2401
MT-50PZ92	USM-2401
MT-50PZ93	USM-2401
MU-40PA10B	USM-2401
MU-42PZ11B	USM-2401
MU-42PZ41V	USM-2401
MU-42PZ90V	USM-2401
MU-50PZ41B	USM-2401
MU-50TV90V	USM-2401
MZ-42PZ13	USM-2401
MZ-42PZ17	USM-2401
MZ-42PZ44	USM-2401
MZ-50PZ43	USM-2401
RU-42PZ90	USM-2401
RU-42PZ91	USM-2401
RU-42PZ92	USM-2401
RU-42PZ93	USM-2401

Marantz:

<i>Display Model</i>	<i>Chief Model</i>
PD-4220	USM-2401
PD-4240	USM-2401
PD-4280	USM-2401

PD-4290D	USM-2401
PD-4292D	USM-2401
PD-4293D	USM-1401
PD-4298HD	USM-1401
PD-5010	USM-2401
PD-5020	USM-2401
PD-5040	USM-2401

Maxx:

<i>Display Model</i>	<i>Chief Model</i>
4250	USM-2401
4250T	USM-2401
5000	USM-2401

Mitsubishi:

<i>Display Model</i>	<i>Chief Model</i>
PD-4225	USM-2401
PD-5010	USM-2401
PD-5030	USM-2401

Monivision:

<i>Display Model</i>	<i>Chief Model</i>
PD-3231	USM-1401
PWV-46	USM-2401

NEC:

<i>Display Model</i>	<i>Chief Model</i>
50XM2A	USM-2401
50XMSA	USM-2401
PD1	USM-2401
PX-2A	USM-2401
PX-3A	USM-2401
PX-42M1A	USM-2401
PX-42M2A	USM-2401
PX-42M3A	USM-2401
PX-42M4A	USM-2401
PX-42M5A	USM-2401
PX-42M5A	USM-2401
PX-42MP1	USM-2401
PX-42PD1	USM-2401
PX-42PD2	USM-2401
PX-42VM1A	USM-2401
PX-42VM2A	USM-2401
PX-42VM3A	USM-2401
PX-42VM4A	USM-2401
PX-42VP1A	USM-2401
PX-42VP2A	USM-2401
PX-42VP3A	USM-2401
PX-42VP4	USM-2401
PX-42VP4D	USM-2401
PX-42ZP4	USM-2401
PX-4A	USM-2401
PX-50M5A	USM-2401
PX-50PD1	USM-2401
PX-50VP1A	USM-2401
PX-50VP2A	USM-2401
PX-50XM1A	USM-2401
PX-50XM2A	USM-2401
PX-50XM3A	USM-2401
PX-5A	USM-2401
PX-MP2	USM-2401
PX-VM1A	USM-2401
VM2A	USM-2401
VM3A	USM-2401
VM4A	USM-2401
VP2A	USM-2401
VP3A	USM-2401

VP4	USM-2401
VP4D	USM-2401
XM1A	USM-2401

NetTV:

<i>Display Model</i>	<i>Chief Model</i>
PDP-42V	USM-2401

Optoma:

<i>Display Model</i>	<i>Chief Model</i>
PD-46	USM-2401

Panasonic:

<i>Display Model</i>	<i>Chief Model</i>
PH-42PWD3	USM-2401
PT-37P1	USM-2401
PT-37PD4P	USM-2401
PT-42P1	USM-2401
PT-42PD1-P	USM-2401
PT-42PD2-P	USM-2401
PT-42PD3-P	USM-2401
PT-42PHD4-P	USM-2401
PT-50PD3-P	USM-2401
PT-50PHD4-P	USM-2401
TC-32LX20	USM-1401
TH-37PW5B	USM-2401
TH-37PWD4E	USM-2401
TH-37PWD4UZ	USM-2401
TH-37PWD5BX	USM-2401
TH-37PWD5UZ	USM-2401
TH-37PWD6UY	USM-2401
TH-37PX20UP	USM-2401
TH-37PX25UP	USM-2401
TH-42PHD5BX	USM-2401
TH-42PHD5UY	USM-2401
TH-42PHD6UY	USM-2401
TH-42PW3E	USM-2401
TH-42PW3U	USM-2401
TH-42PW4EX	USM-2401
TH-42PW5B	USM-2401
TH-42PWD3U	USM-2401
TH-42PWD4U	USM-2401
TH-42PWD4UY	USM-2401
TH-42PWD5BX	USM-2401
TH-42PWD5UY	USM-2401
TH-42PWD6UY	USM-2401
TH-42PX20UP	USM-2401
TH-42PX25UP	USM-2401
TH-50PHD3E	USM-2401
TH-50PHD3U	USM-2401
TH-50PHD5BX	USM-2401
TH-50PHD5UY	USM-2401
TH-50PHD6UY	USM-2401
TH-50PHW5B	USM-2401
TH-50PWD5EX	USM-2401
TH-50PX20UP	USM-2401
TH-50PX25UP	USM-2401

Philips:

<i>Display Model</i>	<i>Chief Model</i>
42FD9935	USM-2401
50FD9934	USM-2401
50FD9955	USM-2401
50W997	USM-2401

Pioneer:

<i>Display Model</i>	<i>Chief Model</i>
----------------------	--------------------

PDP-4300	USM-2401
PDP-4310HD	USM-2401
PDP-4330HD	USM-2401
PDP-433CMX	USM-2401
PDP-433HDE	USM-2401
PDP-433PU	USM-2401
PDP-4340HD	USM-2401
PDP-434DHE	USM-2401
PDP-5030HD	USM-2401
PDP-503CMX	USM-2401
PDP-503HDE	USM-2401
PDP-503MXE	USM-2401
PDP-5040HD	USM-2401
PDP-505HD	USM-2401
PDP-V501MC	USM-2401
PDP-V501X	USM-2401
PDP-V502MX	USM-2401
PDP-V502MX	USM-2401
PRO-1000HD	USM-2401
PRO-1110HD	USM-2401
PRO-800HD	USM-2401
PRO-910HD	USM-2401

Planar:

<i>Display Model</i>	<i>Chief Model</i>
PDP-42B	USM-2401

Polyvision:

<i>Display Model</i>	<i>Chief Model</i>
9350	USM-2401

Princeton Graphics:

<i>Display Model</i>	<i>Chief Model</i>
AR4.6PDP	USM-2401

RCA:

<i>Display Model</i>	<i>Chief Model</i>
PHD50300	USM-2401
PHD50500	USM-2401
PR42300	USM-2401

Runco:

<i>Display Model</i>	<i>Chief Model</i>
CW-42	USM-2401
CW-43MC	USM-2401
CW-50MC	USM-2401
PL-42	USM-2401
PL-42C	USM-2401
PL-42CX	USM-2401
PL-43HDX	USM-2401
PL-50C	USM-2401
PL-50CX	USM-2401
PL-50HDX	USM-2401

Sampo:

<i>Display Model</i>	<i>Chief Model</i>
PME-42S6	USM-2401
PME-42X6	USM-2401

Samsung:

<i>Display Model</i>	<i>Chief Model</i>
HPL5025	USM-2401
HPN5039	USM-2401
PDP-50HD	USM-2401
PDP-50VG	USM-2401
PL-42P3S	USM-2401
PPM-42S2	USM-2401

PPM-42S3	USM-2401
PPM50H2	USM-2401
PPM50H3	USM-2401
PS-42P2S	USM-2401
SPL-4225K	USM-2401
SPN-4235	USM-2401

Sanyo:

<i>Display Model</i>	<i>Chief Model</i>
PDP-32H1A	USM-1401
PDP-42H1A	USM-1401
PDP-42H1W	USM-1401
PDP-42WE1	USM-2401
PDP-42WV1	USM-2401
PDP-42WV1AS	USM-2401
PDP-42WV1S	USM-2401

Sharp:

<i>Display Model</i>	<i>Chief Model</i>
LC-PD50U	USM-2401
PZ-43HV2U	USM-2401
PZ-50HV2U	USM-2401

Sony:

<i>Display Model</i>	<i>Chief Model</i>
KDE-50XBR950	USM-1401
KE-32TS2U	USM-1401
KE-42MR1	USM-1401
KE-42TS2U	USM-1401
KE-42XBR900	USM-1401
KE-42XS910	USM-1401
KE-50MR1	USM-1401
KE-50XBR900	USM-1401
KE-50XBR950	USM-1401
KE-50XS910	USM-1401
KZ-32TS1	USM-1401
KZ-42TS1	USM-1401
PDM-4200	USM-1401
PDM-4210	USM-1401
PDM-5000	USM-1401
PDM-5010	USM-1401
PFM-32C1	USM-1401
PFM-42B1	USM-1401
PFM-42B1U	USM-1401
PFM-42B2	USM-1401
PFM-42V1	USM-1401
PFM-50C1	USM-1401

Tatung:

<i>Display Model</i>	<i>Chief Model</i>
P42BLTL	USM-2401
P46	USM-2401
TPD4201S	USM-2401

Thomson:

<i>Display Model</i>	<i>Chief Model</i>
32PW95	USM-1401
42WS93	USM-2401
42WS93E	USM-2401
42WS94	USM-2401
42WS95	USM-2401
50WS94	USM-2401
50WS95	USM-2401
94	USM-2401
95	USM-2401

Toshiba:

<i>Display Model</i>	<i>Chief Model</i>
42HP82	USM-2401
42WP27	USM-2401
50HP81	USM-2401
50HP82	USM-2401
50PW16	USM-2401
50XP27	USM-2401
PD42W1	USM-2401
PD42WP16	USM-2401

Trans-Lux:

<i>Display Model</i>	<i>Chief Model</i>
Plasma 5000	USM-2401

V INC.:

<i>Display Model</i>	<i>Chief Model</i>
VIZIO P4	USM-2401

Vidikron:

<i>Display Model</i>	<i>Chief Model</i>
VP-42	USM-2401
VP-42HD	USM-2401
VP-50	USM-2401

Viewsonic:

<i>Display Model</i>	<i>Chief Model</i>
VPW420	USM-2401
VPW425	USM-2401
VPW425	USM-2401
VPW450HD	USM-2401
VPW500	USM-2401
VPW505	USM-2401

Yamaha:

<i>Display Model</i>	<i>Chief Model</i>
PDM-1	USM-2401

Zenith:

<i>Display Model</i>	<i>Chief Model</i>
P40V22	USM-2401
P40V24	USM-2401
P42W22	USM-2401
P42W24	USM-2401
P42W34	USM-2401
P50W26	USM-2401
P50W28	USM-2401
P50W38	USM-2401
SC352	USM-2401